
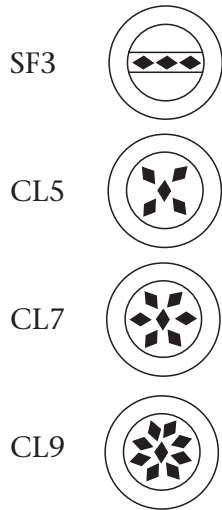



MULTI-SET CLUSTERS

Tool #	Number of Diamonds	Carat Weight
SF31-7	3	1.0
SF32-7	3	2.0
SF33-7	3	3.0
SF34-7	3	4.0
CL5LD7	5	1.0
CL5SD7	5	1.25
CL5HD7	5	1.75
CL7LD7	7	1.25
CL7SD7	7	1.75
CL7HD7	7	2.25
CL9SD7	9	3.0
CL9HD7	9	5.0

RESETS

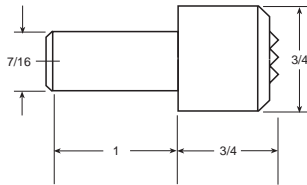

HOW TO ORDER

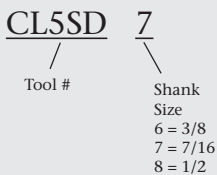

BLADE TYPE DRESSERS

- Diamonds are hand set with a specific diamond pattern to provide consistency throughout tool life for uniform wheel conditioning
- Precision dressing
- Dressing difficult profiles and straight applications
- Long life
- No resetting

CS SERIES

TOOL #	DIAMOND WIDTH	SECTION DEPTH	SIZE THICKNESS
CSA .030	20mm	15mm	.030
CSA .036			.036
CSA .043			.043
CSA .055			.055
CSB .030	10mm	15mm	.030
CSB .036			.036
CSB .043			.043
CSB .055			.055
CSC .036	15mm	10mm	.036
CSC .043			.043
CSC .055			.055
CSD .030	10mm	10mm	.030
CSD .036			.036
CSD .043			.043
CSD .055			.055
CFA .030	20 mm	15mm	.030
CFA .036			.036
CFA .043			.043
CFA .055			.055
CFB .030	10mm	15mm	.030
CFB .036			.036
CFB .043			.043
CFB .055			.055
CFC .036	15mm	10mm	.036
CFC .043			.043
CFC .055			.055
CFD .030	10mm	10mm	.030
CFD .036			.036
CFD .043			.043
CFD .055			.055

SHANKS FOR BLADE TYPE TOOLS

TOOL #	Shank Size
BTH .375	3/8 Shank
BTH .437	7/16 Shank
BTH .0 MT	#0 Morse Taper
BTH 1 MT	#1 Morse Taper